


Wall Track Brackets

Read these instructions carefully and follow all steps in sequence.


For further assistance, please contact Ergotron Customer Service.




USA 1-800-888-8458
Europe +31 20 312.29.39

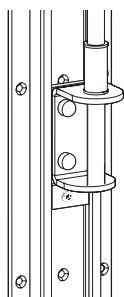


Vertical Mount

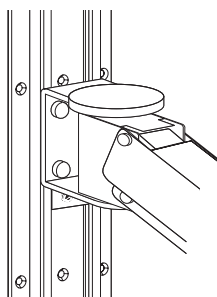

**6" and 12"
suspension
or fixed Arms**





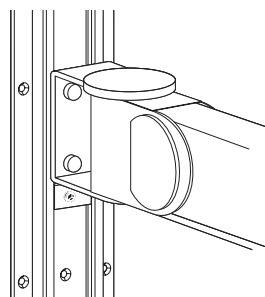




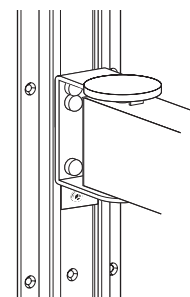


**16" suspension
or lift Arms**

     

Extender Arms



| | A | B | C |
|----------|---------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| 1 |  Wall Track Brackets |  Wall Track Brackets for Extender Arms only |  Stop Block |
| 2 | 4x |   3/8"-16 x 3/4" Hex screw | |
| 3 | 4x |  Flat washer | |
| 4 | 4x |  Cap | |
| 5 | 1x |  Set screw | |
| 6 | 1x |  1/8" | |

 


ERGONOMIC MOUNTING HEIGHT RECOMMENDATIONS

Before proceeding with installation, plan carefully. Read through all steps first, and familiarize yourself with the ergonomic guidelines covered in Ergotron's Installation Planning Guide (888-99-012) or for Flat Panel Monitor Arms, the Ergonomic Data and Mounting Heights Guide (888-99-014) that was shipped with your Ergotron Mounting Solution.


ATTACH BRACKETS TO MOUNTING SOLUTION

STEP
1





1a. With a 9/16" wrench, loosely attach the mounting solution to the two Wall Track Brackets with provided washers and 3/8-16 x 3/4" hex head screws.

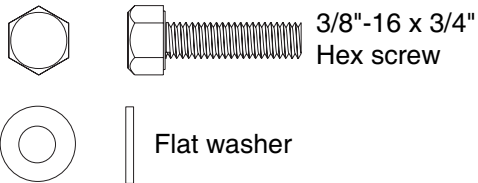

1a

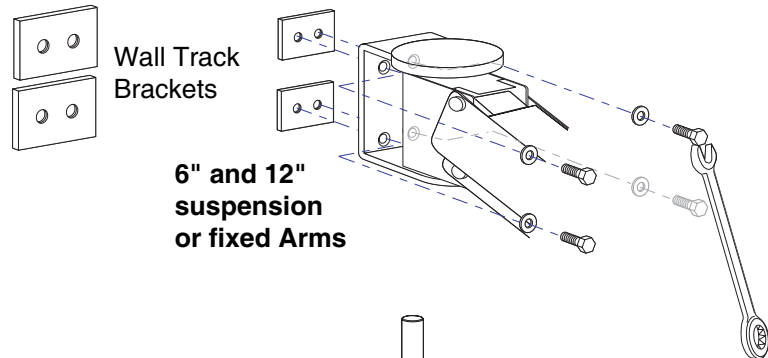


1b. Leave approximately 1/4" space between the Brackets and the mounting solution so the Brackets can slide into the wall track.

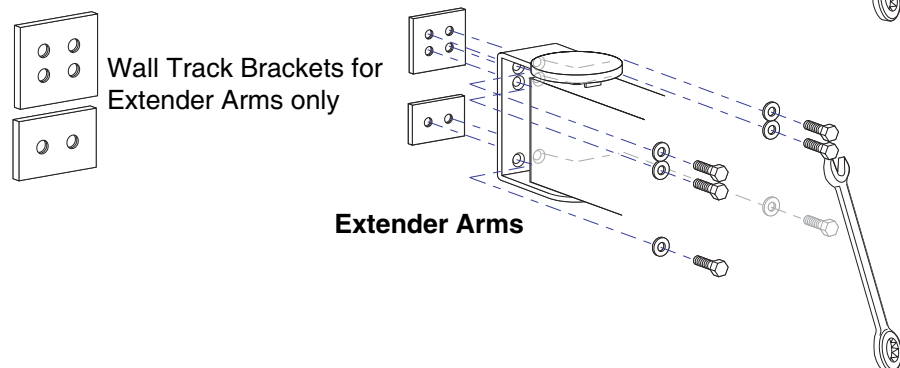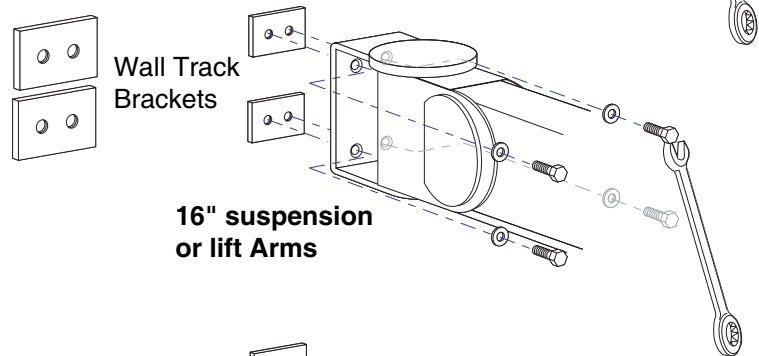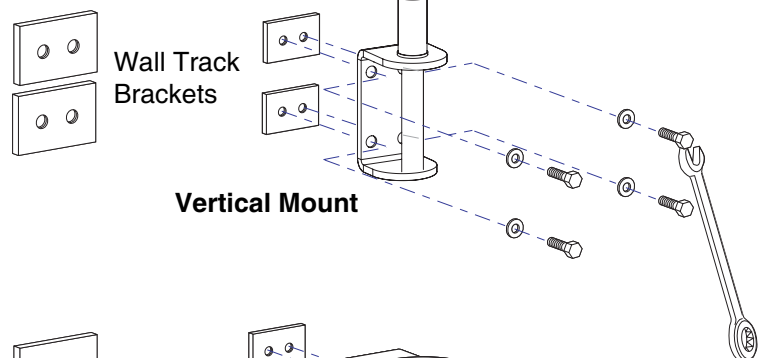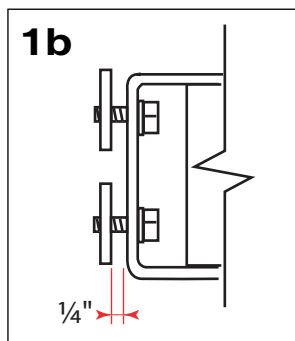

DETERMINE MOUNTING HEIGHT

2a. Determine mounting height based on the Ergonomic Mounting Height Recommendations on page 2 and put a pencil mark where the bottom of the mounting bracket should be.

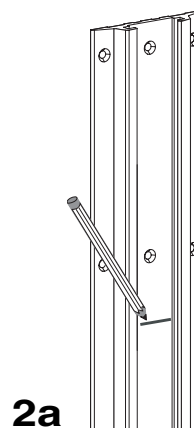

**STEP
2**

ATTACH MOUNTING SOLUTION TO WALL TRACK

NOTE: This manual covers two different mounting methods.

Option 1: Slide mounting solution into wall track from the top.

Option 2: Slide mounting solution into wall track from the bottom.


Follow the set of instructions that is appropriate for you.

**STEP
3**

Option 1: Slide mounting solution into wall track from the top

3a. Slide Stop Block into wall track, position just below pencil mark and secure with the provided 1/8" hex wrench and Set screw.

3b. Slide Wall Track Brackets and mounting solution into wall track and position with bottom of Brackets at pencil mark.

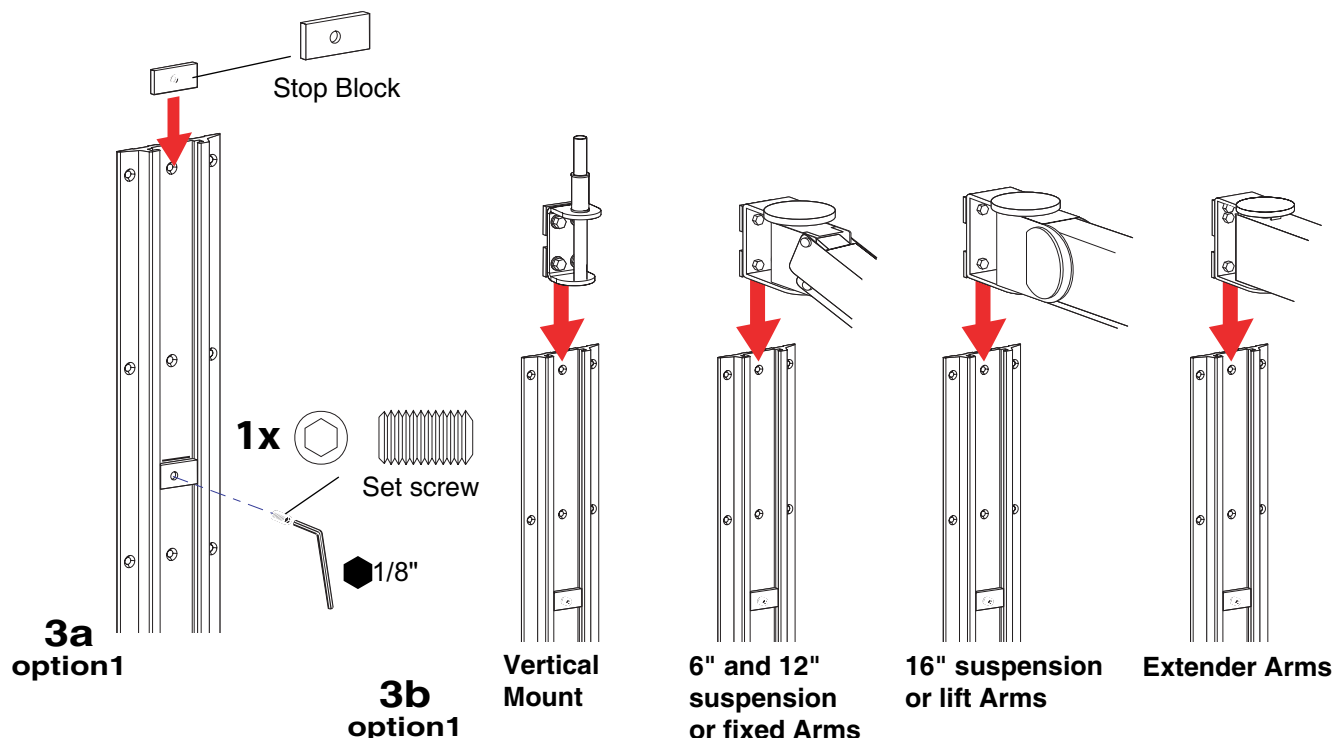


Option 2: Slide mounting solution into wall track from the bottom **STEP**

3

3a. Slide mounting solution up into wall track and position with bottom of mounting bracket at pencil mark.

3b. Slide Stop Block up into wall track and position just below pencil mark.

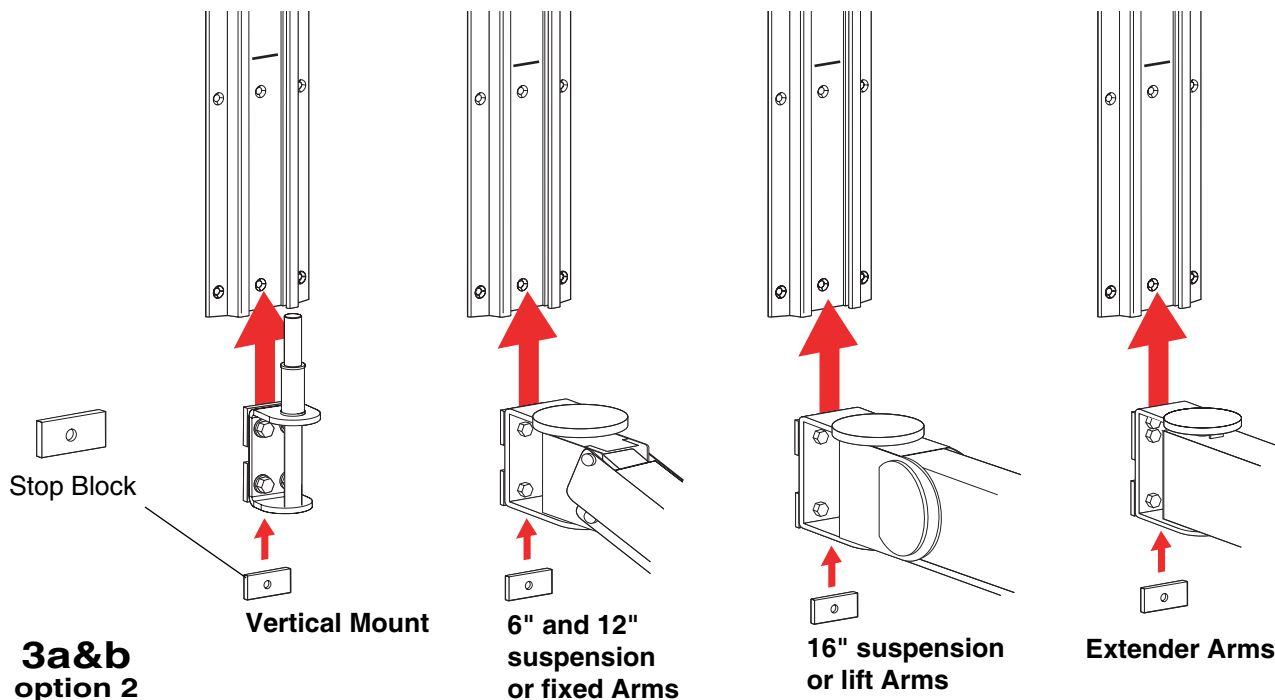


SECURE MOUNTING SOLUTION TO WALL TRACK

STEP 4

4a. With a 9/16" wrench, tighten the hex screws to secure the mounting solution to the wall track.


4b. With the 1/8" hex wrench and set screw, secure the Stop Block to the wall track.

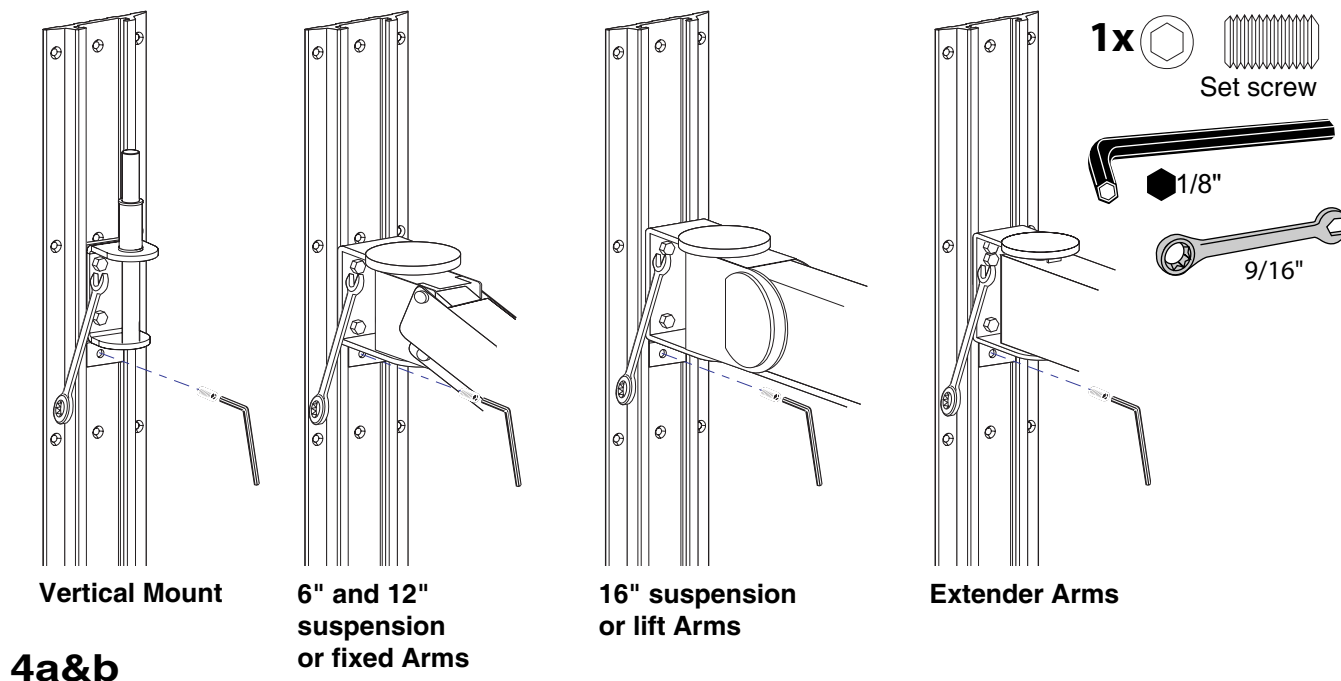


ATTACH CAPS


5a. Cover the Hex screws with the provided Caps as shown.

STEP
5

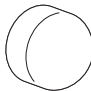
4x  Cap

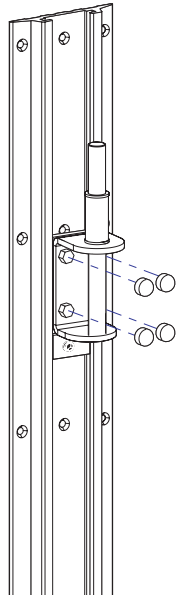


Vertical Mount

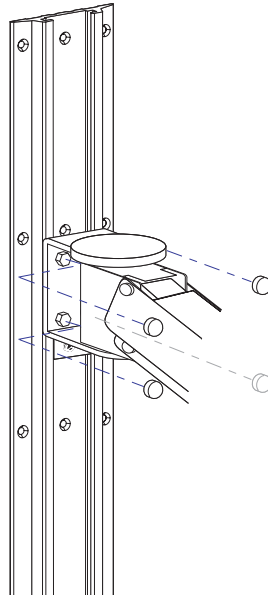

6" and 12"
suspension
or fixed Arms

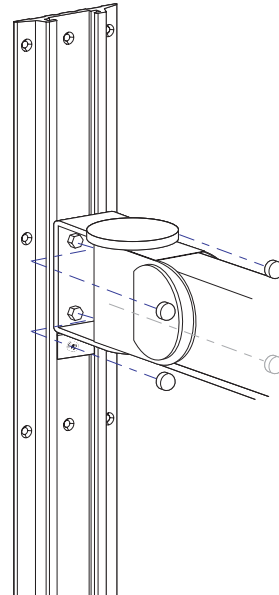

16" suspension
or lift Arms

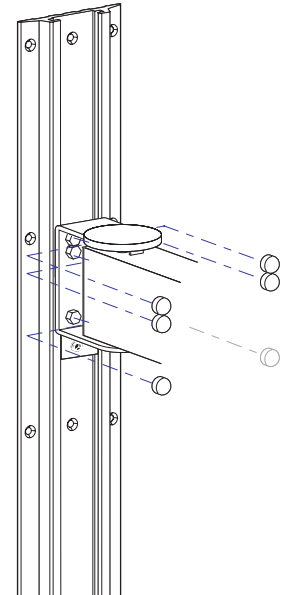

Extender Arms

5a

Warranty

Ergotron warrants that its products will remain free of defects in material and workmanship for (5)-years.

Exclusive Remedy: If any Ergotron equipment is or becomes defective in material or workmanship during the warranty period, Purchaser must return the item to Ergotron with a written explanation of the defect. Ergotron will promptly repair or replace the item and ship it to Purchaser without charge to Purchaser. Performance of repair or replacement does not renew or extend the warranty period.

THIS REMEDY IS THE EXCLUSIVE REMEDY FOR BREACH OF WARRANTY AS TO THE EQUIPMENT, except in respect to personal injury. Purchaser shall give Ergotron immediate written notice of any personal injury resulting from use of Ergotron equipment.

Exclusions and Limitations: Ergotron disclaims liability for injuries or losses caused by or associated with installation or use of its equipment in any manner other than in strict conformance with the instruction sheets, technical bulletins or product literature, or by equipment that has been altered, damaged or misused.

Purchaser has not relied upon and Ergotron disclaims any and all warranties other than the expressed warranty stated above, subject to the exclusions and limitations provided herein. Ergotron disclaims all other warranties, expressed or implied, including but not limited to the warranties of merchantability and fitness for a particular purpose.

Ergotron further disclaims liability to purchaser and all others for all consequential, incidental and special damages caused by or in connection with the products, their use or misuse, and their performance or nonperformance.



© 2005 Ergotron, Inc. All rights reserved.

Patents Pending and Patented U.S. & Foreign. Ergotron is a registered trademark of Ergotron, Inc. Reproduction of this material in whole or part for any purpose other than that authorized by Ergotron, Inc. is prohibited.